





Montage

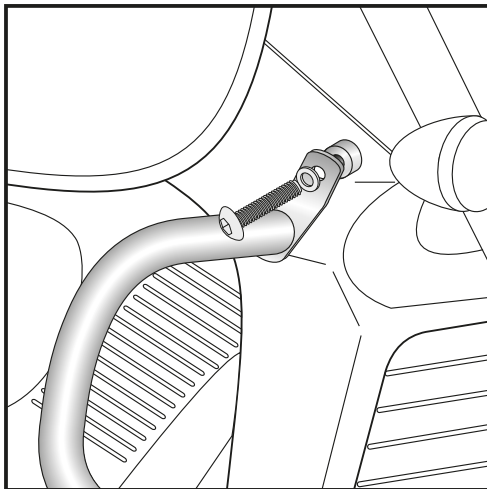



1

Befestigung links und rechts oben:

Außen an der Verschraubung der Kühlerverkleidung unter Zwischenfügen einer Aludistanz $\varnothing 20 \times \varnothing 9 \times 10\text{mm}$. Zur Verschraubung die Linsenkopfschraube M 6 x 40 nebst U-Scheibe $\varnothing 6,4$ verwenden.



je 2x

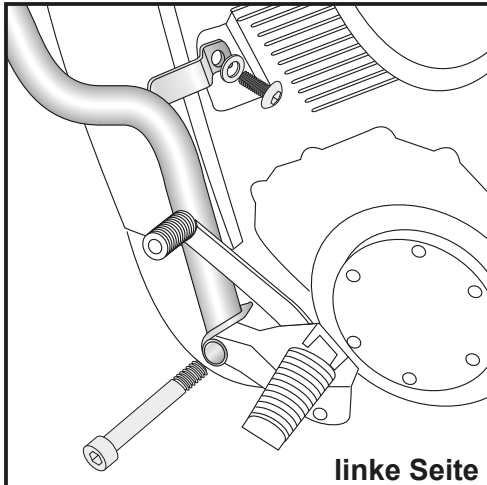


2

Befestigung links mitte:


An der Verschraubung der Lüfterabdeckung mit der Linsenkopfschraube M 6 x 20 nebst U-Scheibe $\varnothing 6,4$.

Befestigung links unten:


An der vorderen Verschraubung der Fußrastenausleger. Zur Befestigung die Zylinderschraube M 10 x 1,25 x 110 verwenden.



je 1x



linke Seite

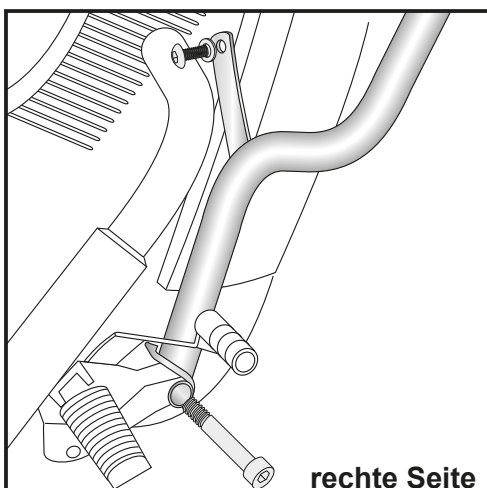


3

Befestigung rechts unten:

An der vorderen Verschraubung der Fußrastenausleger. Zur Befestigung die Zylinderschraube M 10 x 1,25 x 60 verwenden.

Befestigung rechts mitte:

An der Verschraubung des Halters des Bremsflüssigkeitsbehälters und der Hupe mit der Originalschraube.



1x

rechte Seite

Motorschutzbügel
SUZUKI M 1800 R Intruder
(2006-2012)

Artikel Nr.:
5013511 00 02 chrom




Montage

Stück	Bestellnr.	Bezeichnung
1	700000473	Motorschutzbügel links
1	700000474	Motorschutzbügel rechts
1	700000475	Schraubensatz:
1		Zylinderschraube M 10 x 1,25 x 110
1		Zylinderschraube M 10 x 1,25 x 60
1		Linsenkopfschraube M 6 x 20
2		Linsenkopfschrauben M 6 x 40
2		Aludistanzen ø20 x ø9 x 10mm
3		U-Scheiben ø6,4mm



linke Seite

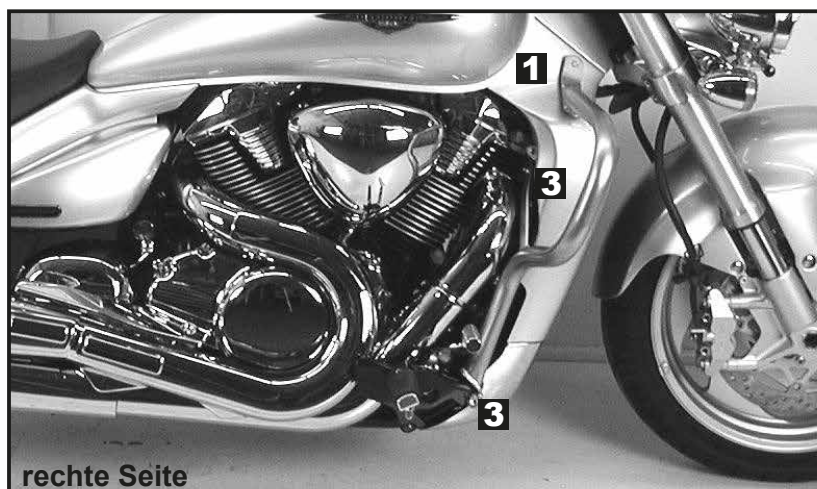

rechte Seite

Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!
Bitte beachten Sie unsere beigelegten Serviceinformationen.



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens


Tel.: 06331 - 1453 - 100
Fax: 06331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de

Engine guard
SUZUKI M 1800 R Intruder
 (2006-2012)

Item-No.
5013511 00 02 chrome




Assembling instructions

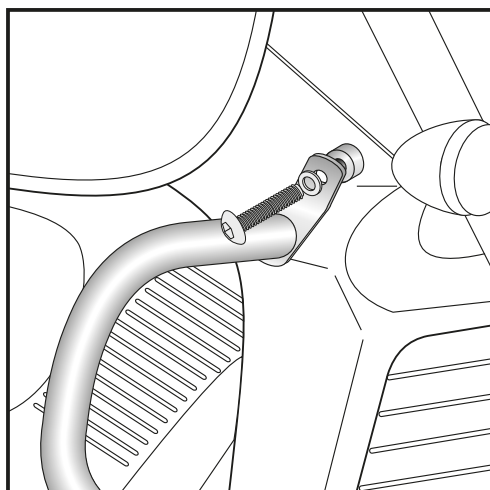


1

Fastening left and right top:

Outside at the screw connection of the cooler with filister head screw M 6 x 40 and washer ø6,4.
 Sandwich spacer ø20 x ø9 x 10mm.



each 2x

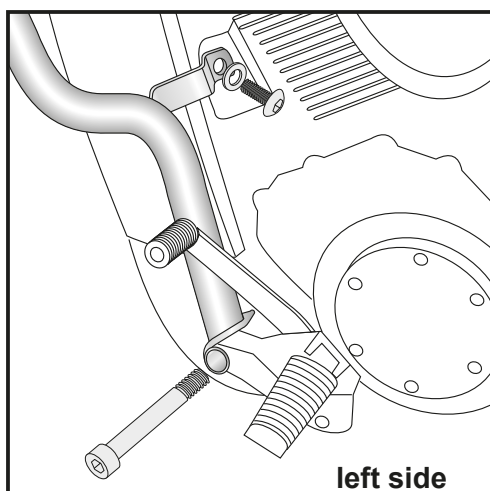


2

Fastening of the crash bar left middle:


At the screw connection of the cooler cover with filister head screw M 6 x 20 and washer ø6,4.

Fastening of the crash bar left bottom:

At the front screw connection of the footrest bracket with allen screw M 10 x 1,25 x 110.



each 1x

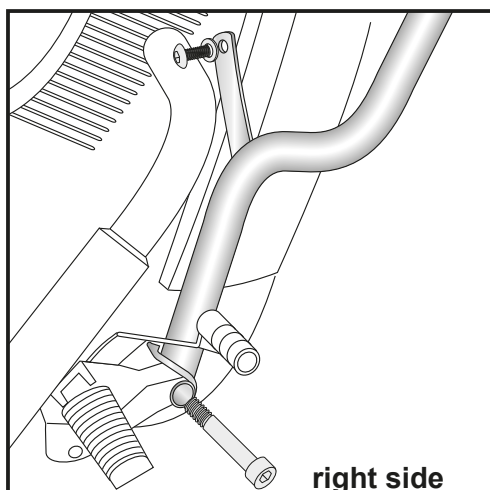


3

Fastening of the crash bar right bottom:

At the front screw connection of the footrest bracket with allen screw M 10 x 1,25 x 60.

Fastening of the crash bar right middle:

At the screw connection of the brake fluid container and the horn with the original screw.



1x


Engine guard
SUZUKI M 1800 R Intruder
 (2006-2012)

Item-No.
5013511 00 02 chrome



Assembling instructions

Quant	item no.	description
1	700000473	crash bar left
1	700000474	crash bar right
1	700000475	screw kit:
1		allen screw M 10 x 1,25 x 110
1		allen screw M 10 x 1,25 x 60
1		filister head screw M 6 x 20
2		filister head screw M 6 x 40
2		spacer ø20 x ø9 x 10mm
3		washer ø6,4mm

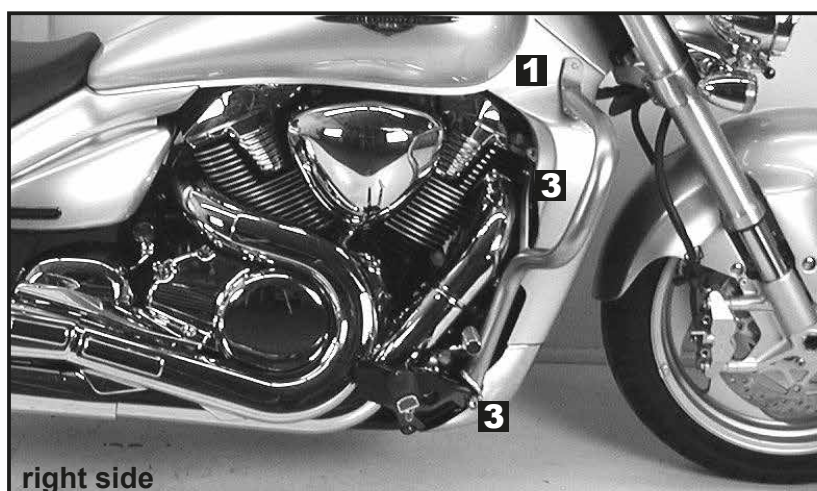

Control all screw connections after the assembling for tightness! Please notice our enclosed service information. All screws, bots und nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.
Medium strength liquid thread-locker (i.e., „Locktite“) should be used to secure all screws, bolts, and nuts.



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Germany

Tel.: +49 6331 - 1453 - 100
Fax: +49 6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de