

Sissybar
SUZUKI M 1500
(2009-2010)



Sissybar mit Gepäckbrücke
Art.-Nr.:
611332 00 02 chrom

Sissybar ohne Gepäckbrücke
Art.-Nr.:
600332 00 02 chrom

Montage

Der Bausatz umfasst die folgenden Teile:

Stück	Bestellnr.	Bezeichnung
1	700010627	Sissybar mit Gepäckbrücke ODER
1	700010595	Sissybar ohne Gepäckbrücke
1	700010596	Schraubensatz:
2		Linsenkopfschraube M8 x 90
2		Linsenkopfschraube M8 x 70
4		Alu-Distanzen ø18 x ø9 x 13 mm
4		U-Scheiben ø8,4mm



Sissybar
SUZUKI M 1500
(2009-2010)



Sissybar mit Gepäckbrücke

Art.-Nr.:

611332 00 02 chrom

Sissybar ohne Gepäckbrücke


Art.-Nr.:

600332 00 02 chrom

Montage


Montage der Sissybar rechts und links
vorne: **1**

Außen über der seitlichen Chromleiste
unter Zwischenfügen einer Aludistanz
ø18 x ø9 x 13 mm. Zur Befestigung die
Linsenkopfschraube M8 x 90 und
U-Scheibe ø8,4 verwenden.

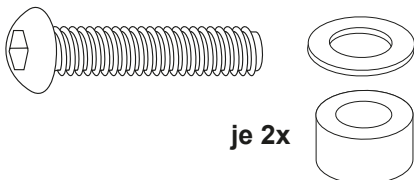


Montage der Sissybar rechts und links
hinten: **2**

unter Zwischenfügen einer Aludistanz
ø18 x ø9 x 13 mm. Zur Befestigung die
Linsenkopfschraube M8 x 70 und
U-Scheibe ø8,4 verwenden. Von hinten
die Originalmutter verwenden.

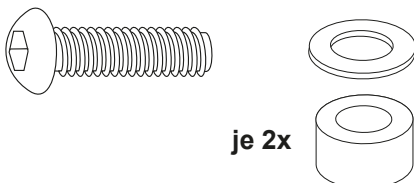

1

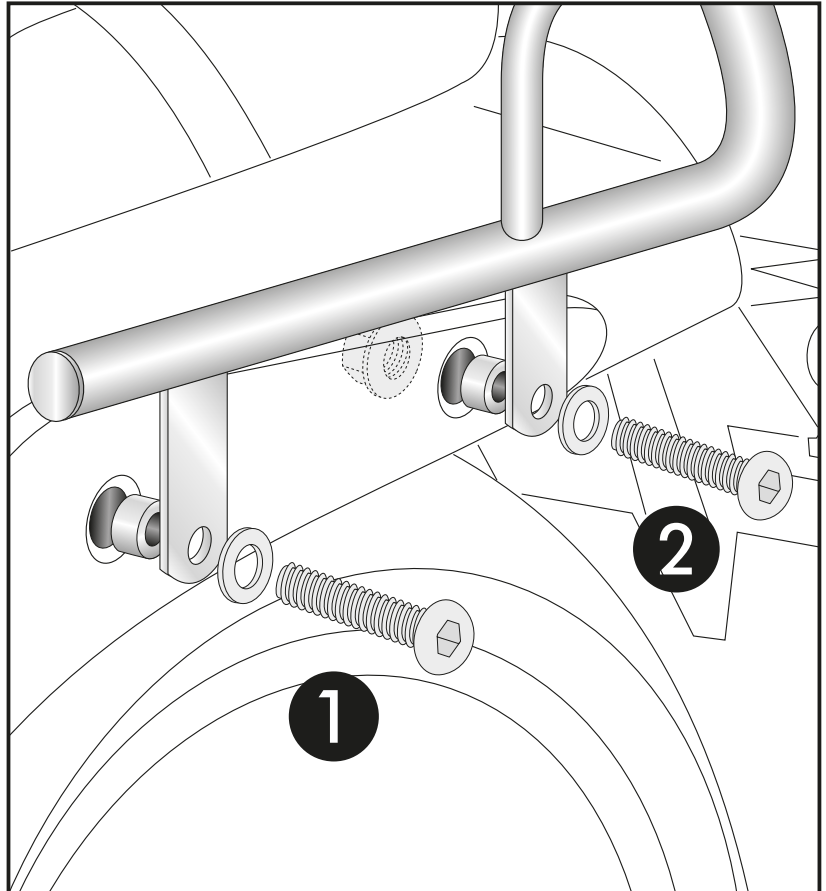

Tip: Chromleisten vor Beginn der Arbeiten mit Klebeband am Kotflügel fixieren - dies erleichtert die Montage.
Die Originalschrauben entfallen. Zur leichteren Montage ist ein zweiter Mann hilfreich.

Anzugsmomente des Motorradherstellers beachten!
Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!
Bitte beachten Sie unsere beigelegten Serviceinformationen.

Weiteres Zubehör: www.hepco-becker.de



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens

Tel.: 06331 - 1453 - 100
Fax: 0)6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de

Sissybar
SUZUKI M 1500
(2009-2010)

Sissybar with rear rack
Item-no.: 611332 00 02 chrome

Sissybar without rear rack
Item-no.: 600332 00 02 chrome



Assembling instructions

The kit includes the following parts:

Quant	item no.	description
1	700010627	Sissybar with rear rack
OR		
1	700010595	Sissybar without rear rack
1	700010596	screw kit:
2		Filister head screw M8 x 90
2		Filister head screw M8 x 70
4		spacer $\varnothing 18 \times \varnothing 9 \times 13$ mm
4		washer $\varnothing 8,4$ mm



Sissybar
SUZUKI M 1500
(2009-2010)

Sissybar with rear rack
Item-no.: 611332 00 02 chrome

Sissybar without rear rack
Item-no.: 600332 00 02 chrome




Assembling instructions

Fastening of the sissybar left+right:

Front: 1


On the chrome cover. Sandwich spacer
ø18 x ø9 x 13 mm.
Use filister head screw M8 x 90 and
washer ø8,4.

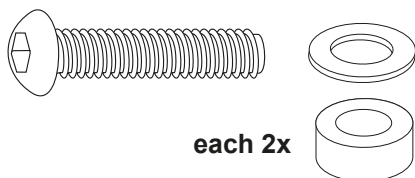


each 2x

Rear: 2

On the chrome cover. Sandwich spacer
ø18 x ø9 x 13 mm.
Use filister head screw M8 x 70 and
washer ø8,4 and original nut.

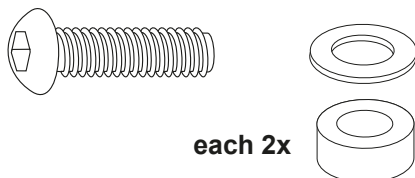

each 2x

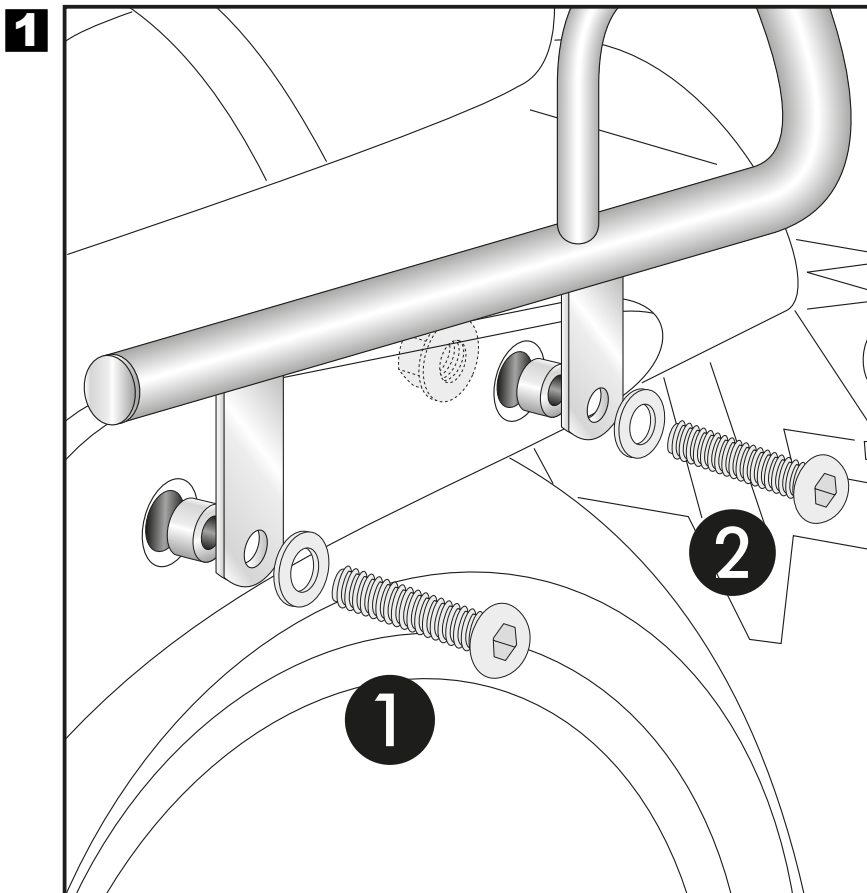

Tip: Before starting, fix the chrome cover to the fender with tape - it makes it easier to assemble the parts.
Original screws are obsolete.

Control all screw connections after the assembling for tightness!
Please notice our enclosed service information.

More accessories: www.hepco-becker.de



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Germany

Tel.: +49 6331 - 1453 - 100
Fax: +49 6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de