

Side carrier

KAWASAKI KLR 650
US-Model (2008-2018)

Item-No.: 650206 00 01 black




Assembling instructions

The kit includes the following parts:

Quant	item no.	description	Quant	item no.	description
1	700007643	carrier left	4		lock it screw
1	700007644	carrier right	4		lock washer
1	700007645	mounting adapter front left	12		washer ø6,4
1	700007646	mounting adapter front right	6		washer ø8,4
1	700007647	mounting adapter top left	8		self-nock nut M6
1	700007648	mounting adapter top right	2		spacer ø13 x ø9 x 12 mm
1	700007649	bracing bow			
1	700011361	screw kit:			
4		allen screw M 6 x 20			
4		filister head screw M 6 x 30			
2		allen screw M 8 x 55			
4		allen screw M 8 x 30			

Tip:
Fit all parts and screw on not too strong.
After mounting all parts, the screws should be tightened to the torque specified.
This guarantees, that the kit is mounted without tension.

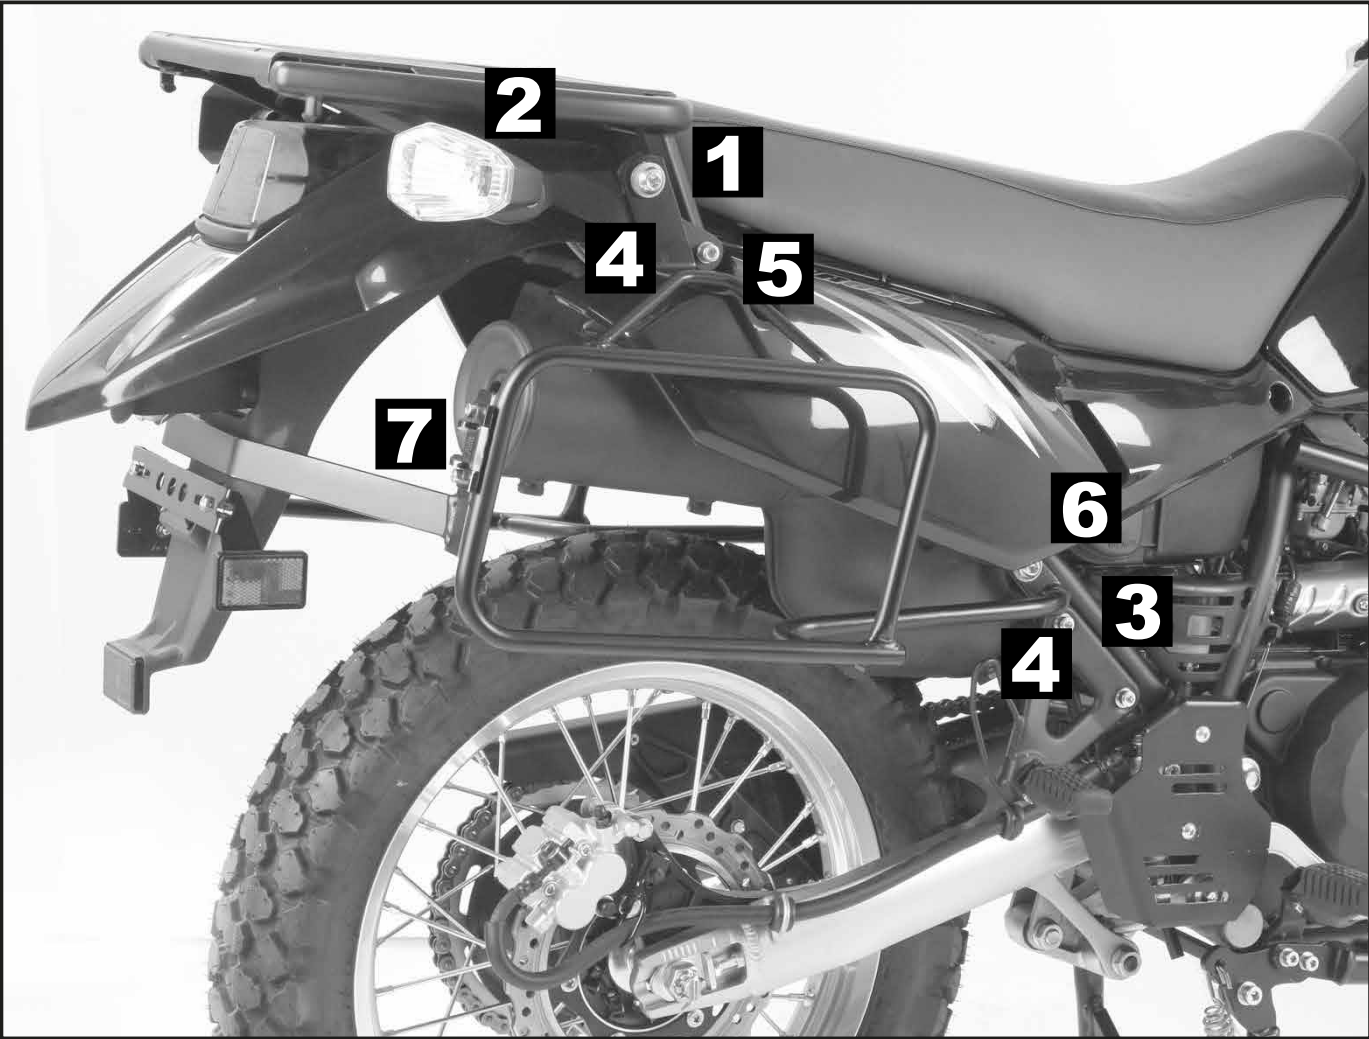

180811 / 110822/180225

Side carrier

KAWASAKI KLR 650

US-Model (2008-2018)

Item-No.: 650206 00 01 black



Assembling instructions


Preparing:

Dismantle blinkers. Screws are obsolete.

Fastening of the adapters left+right top:

At the front bolting of the original rear rack. Original screw is obsolete.


Use allen screws M8x55 with washers Ø8,4. Sandwich spacer Ø13xØ9x12mm.



2x




1

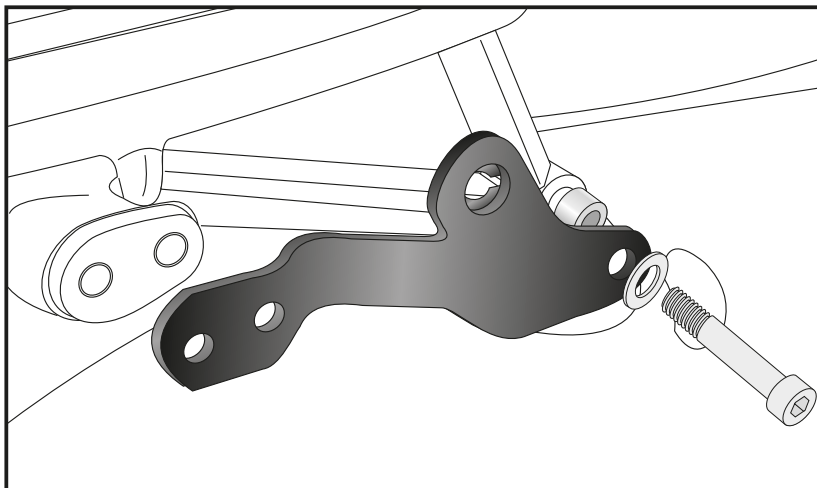

Fastening of the adapters left+right top:
second fixing point at the original position
of the blinkers together with them.

Use filister head screws M6x30 with
washers ø6,4.

Inside use washers ø6,4 and self lock
nut M6.




4x



8x



2

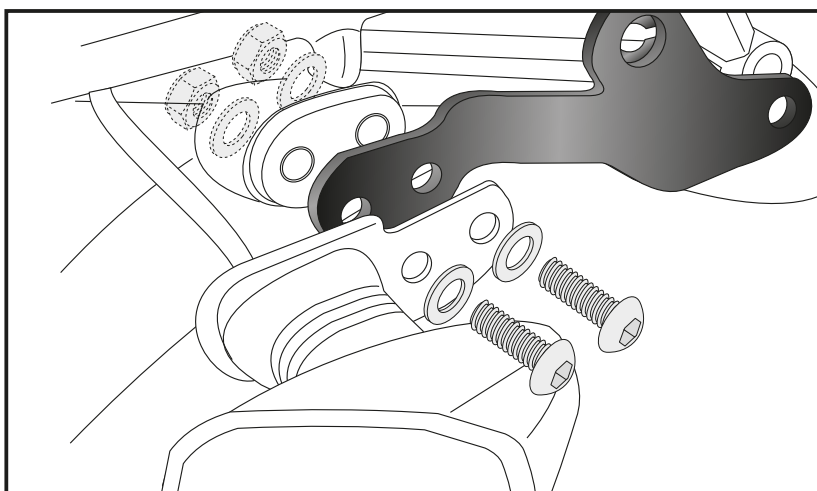


Preparing:

Dismantle footrest brackets.
Screws are obsolete.

Fastening of the adapters left+right front:
between frame and footrest bracket.

Use allen screws M8x30 with washers
ø8,4.




4x

4x



3

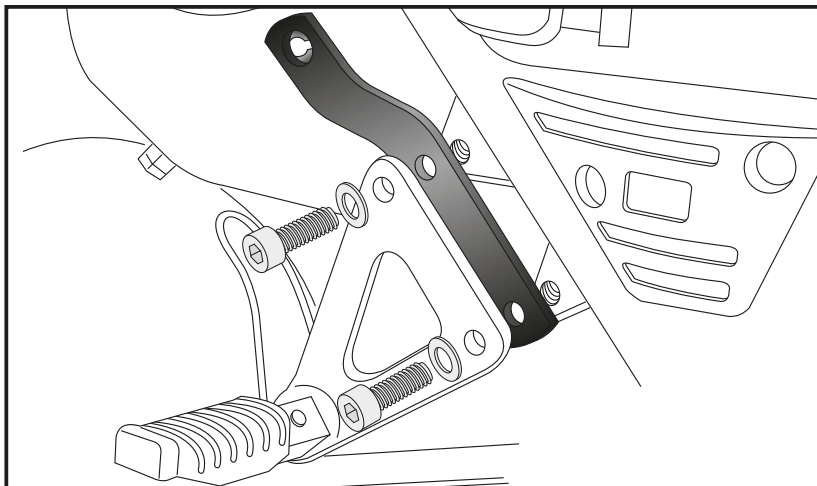

Side carrier


KAWASAKI KLR 650

US-Model (2008-2018)

Item-No.: 650206 00 01 black



Assembling instructions

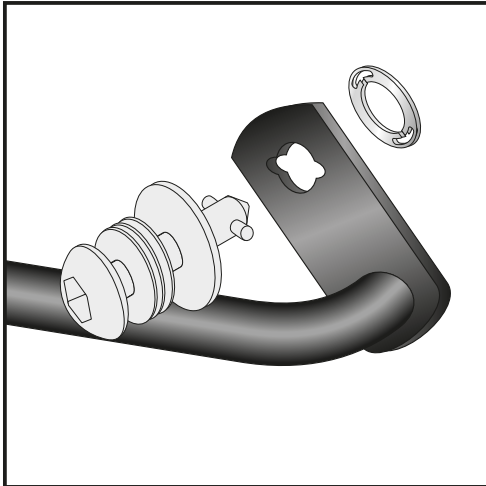


4


Fastening of Lock it screws:

The Lock it screws will be fixed at the carriers left and right with lock washers.

You have to do it only once - the screws and lock washers remain at the carriers.

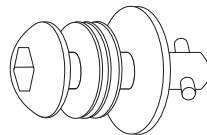

4x

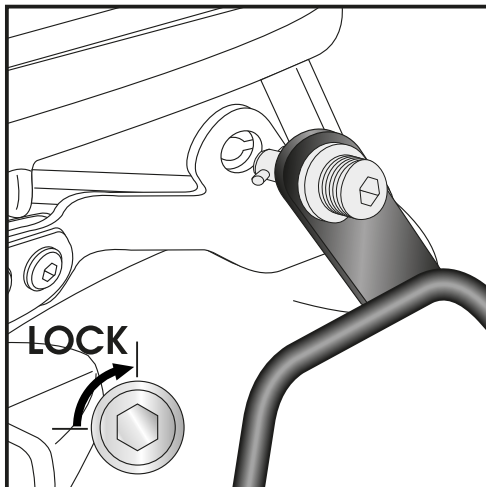

5


Fastening of carrier left+right:

The carriers will now be fixed to the adapter with Lock it -screws

Attention !

Don't overturn the Lock it screw !

Rotate slowly one quarter of a turn until screw engages.

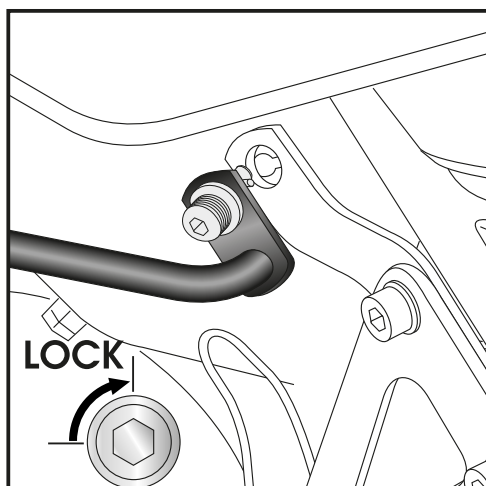

6

Fastening of carrier left+right:

The carriers will now be fixed to the adapter with Lock it -screws

Attention !

Don't overturn the Lock it screw !

Rotate slowly one quarter of a turn until screw engages.

Side carrier


KAWASAKI KLR 650

US-Model (2008-2018)

Item-No.: 650206 00 01 black



Assembling instructions

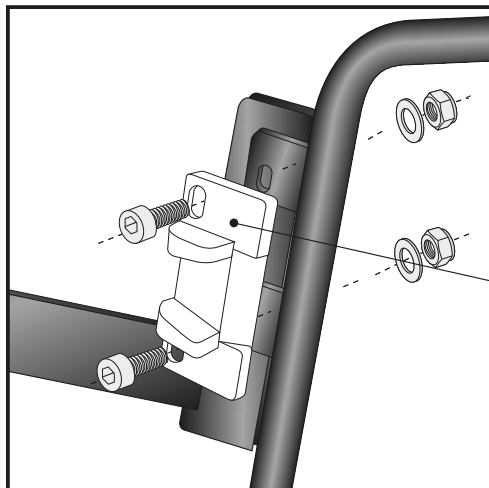


7

Fastening of the bracing bow left+right:
over the fender under the number plate light.


The bows will be fixed to the carrier with filister head screws M6 x20, washer ø6,4 and self lock nut M6.
The adapter to hook in the fixing lock will be screwed too.

Hint :

The adapters are enclosed with the side cases.
They are not included in the side carrier set.



each 4x

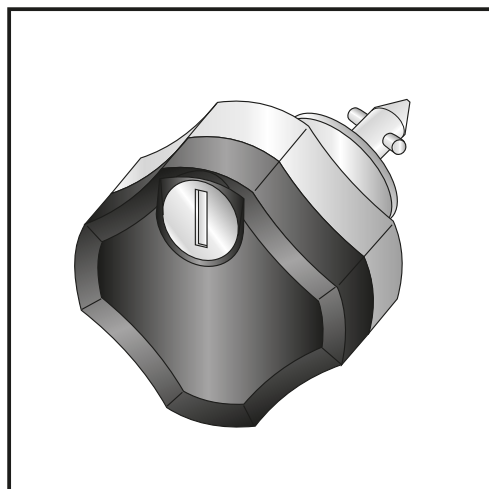

Anti-theft-device

Sold separately - item-no: 151.050

It is recommended to use one on each side of the side-carrier,
instead of the ordinary lock-it screw, for theft protection.

Control all screw connections after the assembling for tightness!
Please notice our enclosed service information.

More accessories: www.hepco-becker.de



Hepco & Becker GmbH
An der Steinmauer 6

D-66955 Pirmasens

Tel.: +49 (0)6331 - 1453 - 100
Fax: +49 (0)6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de