

Gepäckbrücke

SUZUKI M 800 Intruder
(2010-2012)

Art.-Nr.:
6503524 01 02 chrom



Montage

Der Bausatz umfasst die folgenden Teile:

Stück	Bestellnr.	Bezeichnung
1	700007545	Gepäckbrücke
1	700011372	Schraubensatz:
2		Linsenkopfschraube M8 x 90
2		Linsenkopfschraube M8 x 70
4		Alu-Distanzen ø18 x ø9 x 5 mm
4		U-Scheiben ø8,4mm




080411/020922/200225



Montage


Montage der Sissybar rechts und links
vorne: **1**

Außen über der seitlichen Chromleiste
unter Zwischenfügen einer Aludistanz
Ø18 x Ø9 x 5 mm. Zur Befestigung die
Linsenschraube M8 x 90 und
U-Scheibe Ø8,4 verwenden.

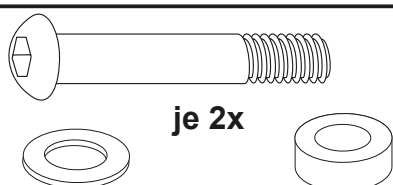


Montage der Sissybar rechts und links
hinten: **2**

unter Zwischenfügen einer Aludistanz
Ø18 x Ø9 x 5 mm. Zur Befestigung die
Linsenschraube M8 x 70 und
U-Scheibe Ø8,4 verwenden. Von hinten
die Originalmutter verwenden.

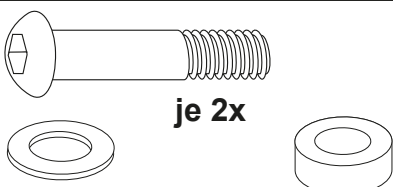

1

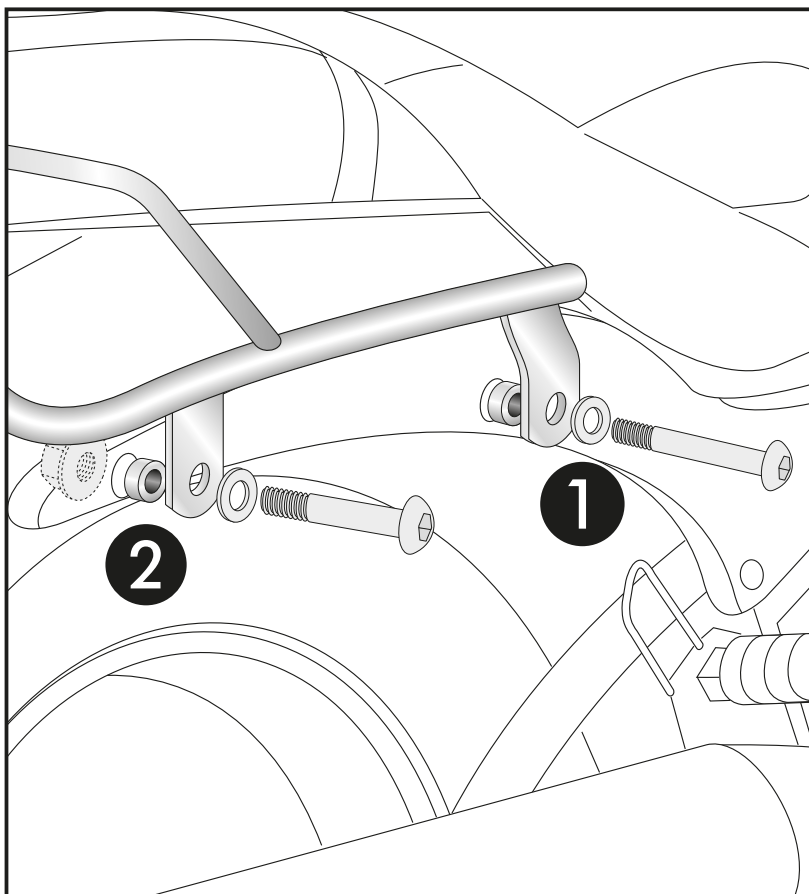

Wenn Brücke und C-BOW kombiniert angebaut werden, muss zwischen Brücke und Halteadapter vorne eine Aludistanz Ø18 x Ø9 x 5mm eingesetzt werden. Hinten wird eine Aludistanz Ø18 x Ø9 x 12mm eingesetzt. Siehe hierzu auch Montageanleitung 6303524 C-Bow.

Anzugsmomente des Motorradherstellers beachten!
Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!
Bitte beachten Sie unsere beigefügten Serviceinformationen.

Weiteres Zubehör: www.hepco-becker.de



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens

Tel.: 06331 - 1453 - 100
Fax: 0)6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de

Rear rack

SUZUKI M 800 Intruder
(2010-2012)

Item-no.: 6503524 01 02 chrome



Assembling instructions

The kit includes the following parts:

Quant	item no.	description
1	700007545	rear rack
1	700011372	screw kit:
2		filister head screw M8 x 90
2		filister head screw M8 x 70
4		spacer $\varnothing 18 \times \varnothing 9 \times 5$ mm
4		washer $\varnothing 8,4$ mm



Rear rack

SUZUKI M 800 Intruder
(2010-2012)


Item-no.: 6503524 01 02 chrome



Fastening of the sissybar left+right:


Front: 1

On the chrome cover. Sandwich spacer
 $\varnothing 18 \times \varnothing 9 \times 5$ mm.
Use filister head screw M8 x 90 and
washer $\varnothing 8,4$.

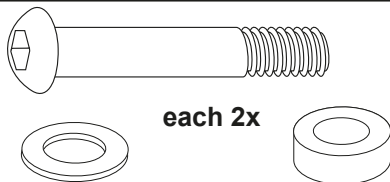


Rear: 2

On the chrome cover. Sandwich spacer
 $\varnothing 18 \times \varnothing 9 \times 5$ mm.
Use filister head screw M8 x 70 and
washer $\varnothing 8,4$ and original nut.

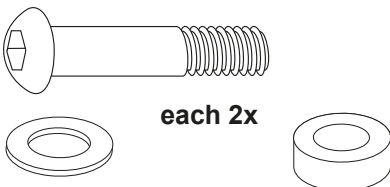

1

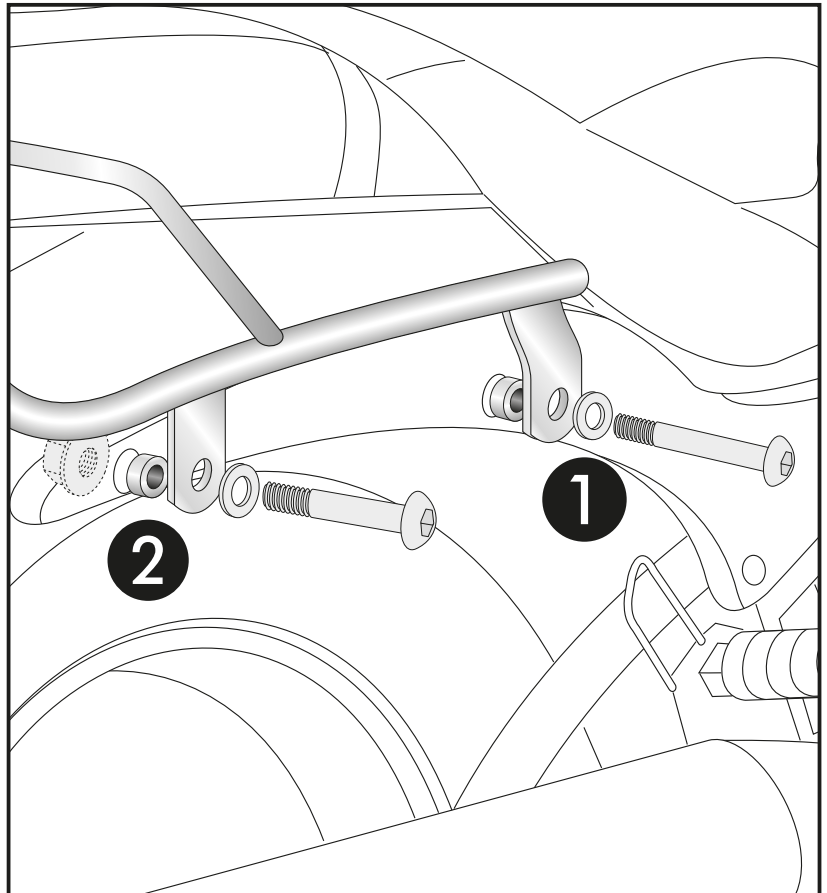

When rear rack and C-BOW are mounted together you have to sandwich spacers between rear rack and C-Bow adapter. Front fixing point use spacer $\varnothing 18 \times \varnothing 9 \times 5$ mm, rear fixing point use spacer $\varnothing 18 \times \varnothing 9 \times 12$ mm. Also refer to assembling instruction 6303524 C-Bow.

Control all screw connections after the assembling for tightness!
Please notice our enclosed service information.

More accessories: www.hepco-becker.de



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Germany

Tel.: +49 6331 - 1453 - 100
Fax: +49 6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de