

Lampenschutzgitter

YAMAHA XT 660 Z Ténéré
(2008-2016)

Art.-Nr.: 7004526 00 01 schwarz




Montageanleitung

Der Bausatz umfasst die folgenden Teile:

Stück	Bestellnr.	Bezeichnung
1	700012246	Lampenschutzgitter
1	700012247	Schraubensatz:
2		Zylinderschrauben M5 x 45
2		Zylinderschrauben M6 x 55
2		Distanzen $\varnothing 13 \times \varnothing 7 \times 14$


Befestigung oben links und rechts:

an den zwei mittleren Befestigungspunkten der Scheibe mit Zylinderschrauben M5 x 45. Originalschrauben entfallen.



Befestigung unten links und rechts:

an der unteren Verschraubung der Scheinwerfermaske. Originalschrauben entfallen. Die original abgesetzten Distanzen einsetzen, darüber die Alu-Distanzen $\varnothing 13 \times \varnothing 7 \times 14$ legen und mit dem Lampenschutzgitter mit Zylinderschrauben M6 x 55 befestigen. Gitter ausrichten und festziehen.

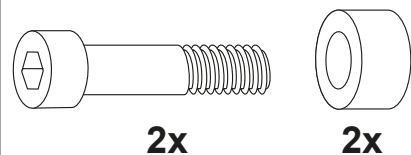

Das Lampenschutzgitter ist für den Offroad-Einsatz entwickelt worden und hat keine TÜV-Zulassung.

Anzugsmomente des Motorradherstellers beachten!

Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!

Bitte beachten Sie unsere beigelegten Serviceinformationen.

Weiteres Zubehör: www.hepco-becker.de



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens

Tel.: 06331 - 1453 - 100
Fax: 06331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de

Headlight grille

YAMAHA XT 660 Z Ténéré
(2008-2016)

Item-no.: 7004526 00 01 black




Assembling instructions


The kit includes the following parts:

Quant	item no.	description
1	700012246	Headlight grille
1	700012247	Screw kit:
2	151.182	Allen screws M5 x45
2	150.770	Allen screws M6 x 55
2	150.881	Spacer $\varnothing 13 \times \varnothing 7 \times 14$

Fastening top left and right:
at the two original fixing points of the wind shield with allen screws M5 x 45.
Original screws are obsolete.



Fastening bottom left and right:
at the two original fixing points of the headlight screen.
Original screws are obsolete.
Use the original spacers first, then the alu spacer $\varnothing 13 \times \varnothing 7 \times 14$ and fix it together with the headlight grill with allen screws M6 x 55.

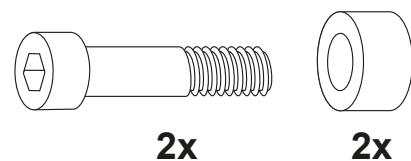

Control all screw connections after the assembling for tightness!
Please notice our enclosed service information.

More accessories: www.hepco-beck.de



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Germany

Tel.: +49 6331 - 1453 - 100
Fax: +49 6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de